

TORQUE / LOAD INDICATOR


RSC Ekusasa Mining is the Original Equipment Manufacturer (OEM) and supplier of the RSC Torque / Load Indicator to the mining industry in Africa.

Description

Torque / Load Indicators are located between the nut and bearing plate washer and serve to indicate at a glance whether a minimum load has been achieved on an installation. Comprising simple domed and profiled steel plates, they collapse during tensioning, causing spreading and flattening. Failure to collapse indicates a sub-standard installation.

Advantages of the product

- Different "collapse loads" available.
- Accurate indication of initial load.
- Quick indication of sub-standard installations.

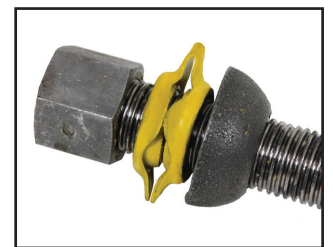

Examples of use

SA Patent No:	2007/01315
SA Design Registration No:	F2006/0220

General Disclaimer

The information contained within this document is correct at the time of publishing and every attempt is made to ensure its accuracy. The information contained within is subject to change without notice. All information should be viewed as guidelines and are for information purposes only.

RSC Ekusasa Mining Joint Venture (Pty) Ltd is not responsible to ensure the correct use, application or installation of this product. All intellectual property is owned by RSC Ekusasa Mining Joint Venture (Pty) Ltd and any unauthorised use thereof will be viewed as an infringement on their rights.